

## A. Functions Introduction

- Time display function, hours, minutes, seconds
- Date display function
- Backlight function

## B. Time Mode

### Normal Display:



(B Button) Mode

(A Button) Set

### Switch Mode:

#### Press B button to switch mode: Time Mode - > Date Mode - > Time Mode

- Remarks:
- Press B button to have backlight and switch date mode simultaneously. Date mode automatically return to time display mode after 5 seconds
  - The month and year change, if the date exceeds the maximum date of the month, it is automatically adjusted to the maximum date of the month

### Time Setting:

- Press A button: Press and hold 2S to enter the time setting state.
- Press B button: Press B to increase the value, press and hold to increase quickly
- Press A button: Press to set seconds > hours > minutes > month > date > return

Remarks: Setting state returns to Time Mode for 1 minute without any button operation.